



Pop-A-Plug[®] Removal Tool

Remove Pop-A-Plug Tube Plugs with Ease

Key Features

- Can be operated manually with slide hammer or hydraulically with our Small Ram Kit
- Plugs can quickly be removed for retubing or to bring heat exchanger tubes back into service

Technical Documents

- [DC4033 - Pop-A-Plug Plug Removal Tool Operating Procedures](#)

Quickly remove installed Pop-A-Plug Tube Plugs (CPI/Perma or P2) with our dual functioning Plug Removal Tool. Features nose piece that threads into the pin of an installed plug, enabling the pin to be separated from the ring.

Plug Removal Tool retains the pin while a serrated spear grabs the ring's ID. An integral slide hammer pulls out the ring and pin in one operation. Available in extended models.

Size Range

- Available for tube plug sizes from 0.400" to 1.180" (10.16mm to 29.97mm)
- Extensions available in 1ft (30cm), 2ft (60cm), 4ft (120cm), and 6ft (180cm) lengths

Standard Materials

- Zinc plated carbon steel slide hammer and pull rod with hardened alloy steel tapered spear

Includes

- Pull Rod assembly, Slide hammer, Spear, Self-tapping stud & adapter



North, Central & South America

2701 Township Line Rd
Hatfield, PA 19440

T: (+1) 215.721.1100 | (+1) 1.800.355.7044
E: est-info@curtisswright.com

Europe, Middle East, Africa (EMEA)

Hoorn 312D, 2404 HL Alphen aan den Rijn
The Netherlands

T: (+31) 172.418841
E: est-emea@curtisswright.com

Asia

Singapore
T: (+65) 3158.5052
E: est-asia@curtisswright.com

Korea

+82.10.9279.7132
est-asia@curtisswright.com

valves.curtisswright.com/EST

Pop-A-Plug® Removal Tool

©2026 Curtiss-Wright - All rights reserved. Specifications are subject to change without notice. All trademarks are property of their respective owners. I MK0030_06.2026

